
Matogak River viewed from the south.



Matugaq (Matogak) River, BB-N02

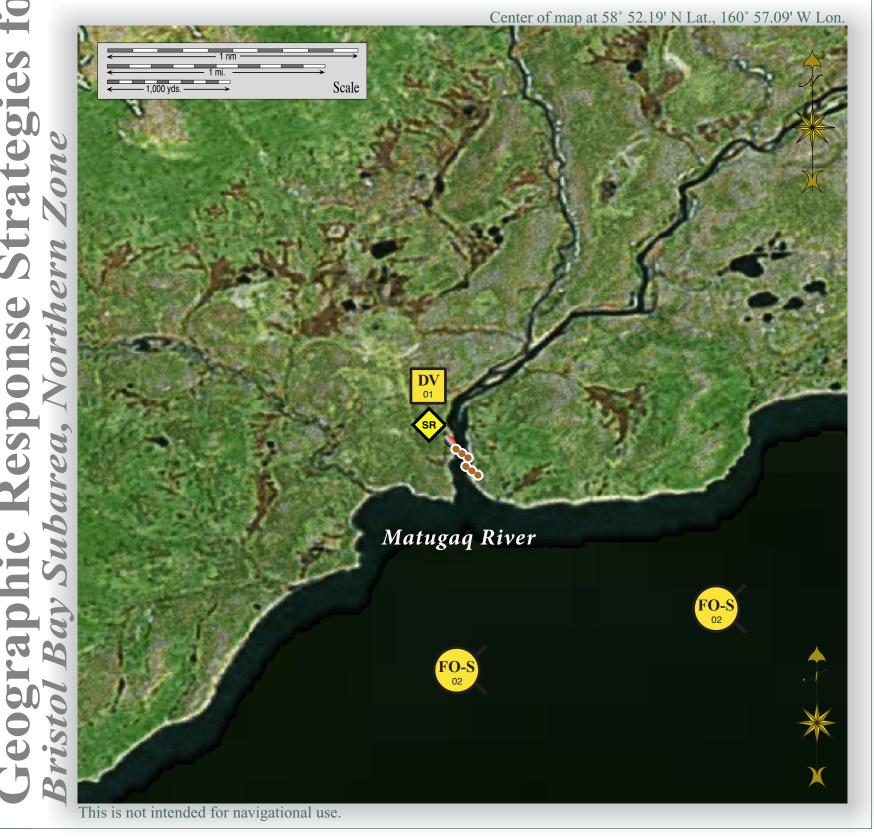

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
N-02-01 DV	Matugaq River (Matogak) Lat. 58° 52.60'N Lon. 160°57.08'W	Divert and Collect Divert oil to shore side collection location on the shore of the Matogak River.	Deploy anchors and boom with skiffs (class 6). Place 800 ft of fast-water boom in 2 cascaded sections at the proper angle to divert incoming oil to the collection sites. Complete the array with 60 ft. of tidal seal boom on the shore that will be used as a collection site. Set up shore-side recovery and tend throughout the tide.	Deployment Equipment 800 ft. fast-water boom 60 ft. tidal seal boom 6 ea. anchor systems 4 ea. anchor stakes 1 ea. shore-side recovery systems Vessels 1 ea. class 3 1 ea. class 6 Personnel/Shift 6 ea. vessel crew/general techs 2 ea. response techs Tending Vessels 1 ea. class 3 1 ea. class 3 1 ea. class 6 Personnel/Shift 4 ea. vessel crew/general techs 1 ea. skilled tech	Togiak	Via marine waters Chart 16305	Fish- intertidal spawning- salmon (June-Sept.), capeline, sheefish, white fish Birds-waterfowl, seabird and shorebird concentration Marine mammals- seals Habitat- exposed tidal flats, peat shoreline, marsh, Human use-subsistence	Vessel master should have local knowledge. Title 41 permitting required from ADNR. Take precautions to protect the shoreline as outlined in the Alaska STAR Manual. A large population of bears are in this area. Bear guard required. Surveyed: not yet Tested: not yet
N-02-02 FO-S	Matugaq River (Matogak) Nearshore waters in the general area of: Lat. 58° 52.19'N Lon. 160°57.09'W	Free-oil Recovery Maximize free-oil recovery in the offshore & nearshore environment of Matugaq River (Matogak) depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of the Matugaq River (Matogak). Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Togiak	Via marine waters Chart 16305	Same as N-02-01	Vessel master should have local knowledge. Use extreme caution, shallow waters with shifting channels and bars.